




STRIKE

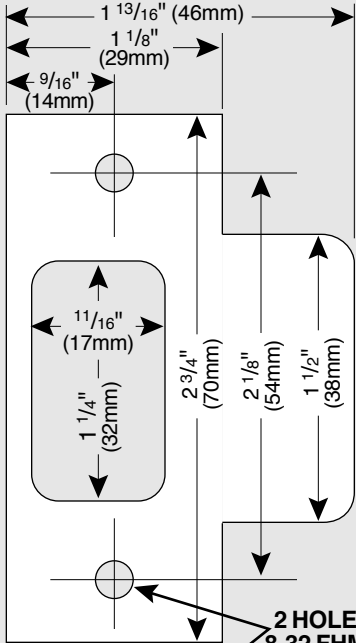

LATCH CUTOUT

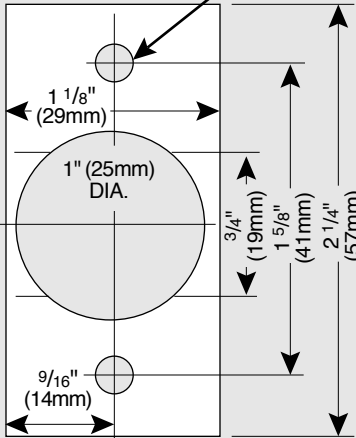


STRIKE BOX

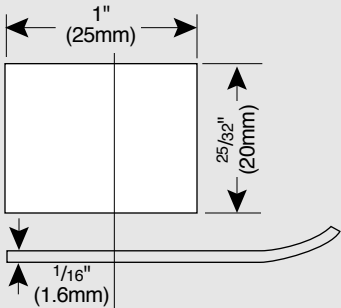

RIGHT HAND

CAUTION
APPLY TEMPLATE AND DRILL FROM OUTSIDE BUT COMPENSATE FOR DOOR BEVEL IF ANY.


MARK CENTER OF DOOR THICKNESS

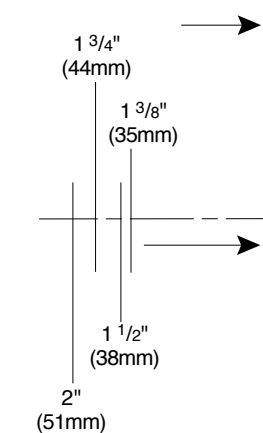


BORE
1" (25mm) DIAM.
LATCH HOLE

THIS FLAP FOLDS OVER THE EDGE OF THE DOOR
BE SURE THE FOLD IS EXACTLY ON THE LINE

CAUTION : MARK ACCURATELY - BORE STRAIGHT

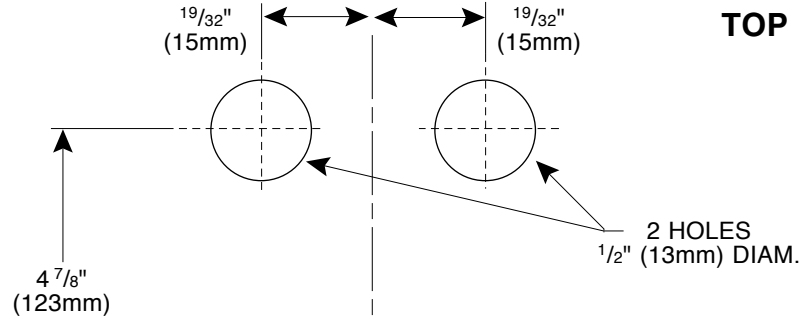


REFERENCE ONLY, NOT TO SCALE
DO NOT USE AS A DRILLING TEMPLATE
CONTACT CUSTOMER SUPPORT

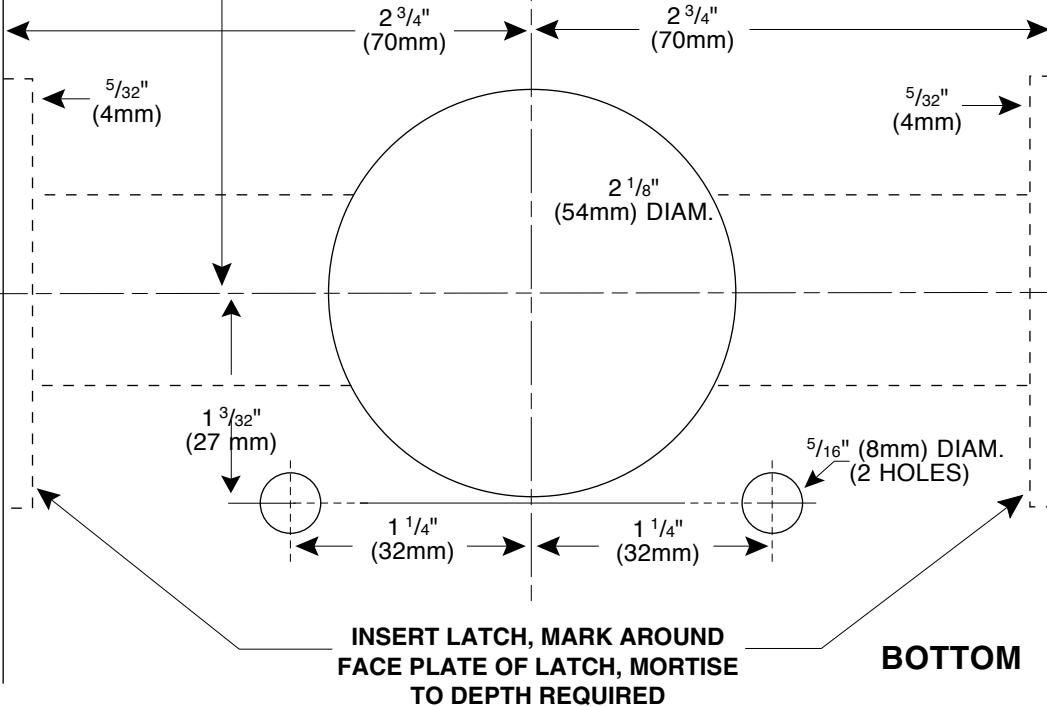

INSERT LATCH, MARK AROUND
FACE PLATE OF LATCH, MORTISE
TO DEPTH REQUIRED

THIS FLAP FOLDS OVER THE EDGE OF THE DOOR
BE SURE THE FOLD IS EXACTLY ON THE LINE

MARK CENTER OF DOOR THICKNESS

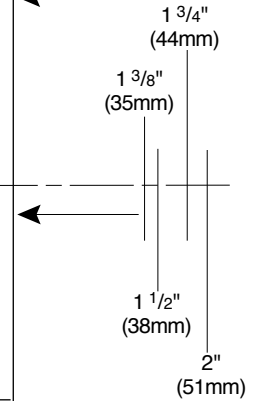

BORE
1" (25mm) DIAM.
LATCH HOLE

LEFT HAND

NOTE: Lock will accommodate doors 1 9/8" (35mm) to 2 1/4" (57mm) thick. Suitable reinforcement shall be provided by the hollow metal door manufacturer to prevent collapsing of door. When door silencers are to be installed, proper allowances must be made for strike location.

BOTTOM